

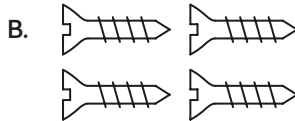


THANK YOU

for your purchase of our custom crafted
Dock Appeal Flagpole

Included in this kit:

- A. 4-way Ratchet Mount Flagpole Base
- B. 4x Stainless Steel Mounting Screws
- C. 1x Phillips HeadScrew Bit
- D. 1x Dock Appeal Sticker (*Just for fun*)



****NOT INCLUDED BUT REQUIRED****

3/16" Drill Bit to Pre-drill Holes
for Mounting Screws



(Available at any hardware store)

4x TAPCON Flathead
Concrete Anchors (1/4" x 2 3/4")*



(*Only needed for concrete or stucco.
Available at any hardware store)

INSTALLATION INSTRUCTIONS FOR DOCK PILING AND WOOD STRUCTURES:

STEP 1

Align 4-way ratchet mount base at location and height you want the flagpole mounted

STEP 2

Pre-Drill pilot holes with 3/16" drill bit *(Not Included)*


STEP 3

Attach ratchet mount base with the provided stainless steel screws *(Wood Application Only)*

STEP 4

Once ratchet mount is securely attached, align threaded *(male end)* of ratchet mount to the threaded insert *(female end)* of flagpole. Slowly rotate flagpole clockwise until secured onto ratchet base. **(DO NOT FORCE OR OVERTIGHTEN)**

For concrete or stucco applications: Use a 3/16" masonry drill bit *(also available at any hardware store)* to pre-drill the pilot holes. Once pilot holes are drilled, attach the ratchet mount with *(4x not included)* 1/4" x 2 3/4" flathead TAPCON concrete anchors. Available in white or blue. *(also at your local hardware store)*



HAVING TROUBLE?
Visit [DockAppeal.com](https://dockappeal.com) and go to "Gallery" and "Videos"
for a short 30 second video.

If all else fails call your neighbor or local handyman for help!!